


TROUBLE SHOOTING GUIDE

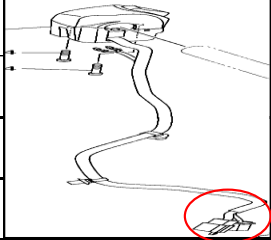
TSG-2020-0003

DATE	28/11/2020	ISSUE BY	zaidi	CHECK BY	Rashid	APP.BY	Mazmin
-------------	------------	-----------------	-------	-----------------	--------	---------------	--------

MODEL	Xmax	PROBLEM	engine die off while riding
--------------	------	----------------	-----------------------------

SYMPTOM	Bike cannot start when pushing start button
----------------	---

PHOTO		<p>Socket connection of button start loose</p>
--------------	---	--

ITEMS	DESCRIPTION	PHOTO	
Check Point	Step 1	Check terminal screw battery	
	Step 2	Check fuse	
	Step 3	Open all cover side checking main harness	
	Step 4	Check all connection socket main harness	
Problem Finding	Step 1	Switch handle button start socket disconnect.	
	Step 2		
Action Taken	Step 1	Properly connect back socket switch handle 3 with main harness	
	Step 2		
Test Result	1	Problem solved.	
	2	Tested -ok-	
	3		