

Y16ZR

ACCESSORY VISOR

USER MANUAL

CONTENT


INSTALLATION GUIDE

DISASSEMBLY GUIDE

PRECAUTION

WHAT'S IN THE BOX

- 1) VISOR (BAX-F61AA-00-ACC) – 1 pcs
 - 2) Ring (BAX-F6249-□□-ACC) – 2 pcs
 - 3) DOXOU EMBLEM** – 1 pcs
 - 4) CERTIFICATE** – 1 pcs
- **For DOXOU version only

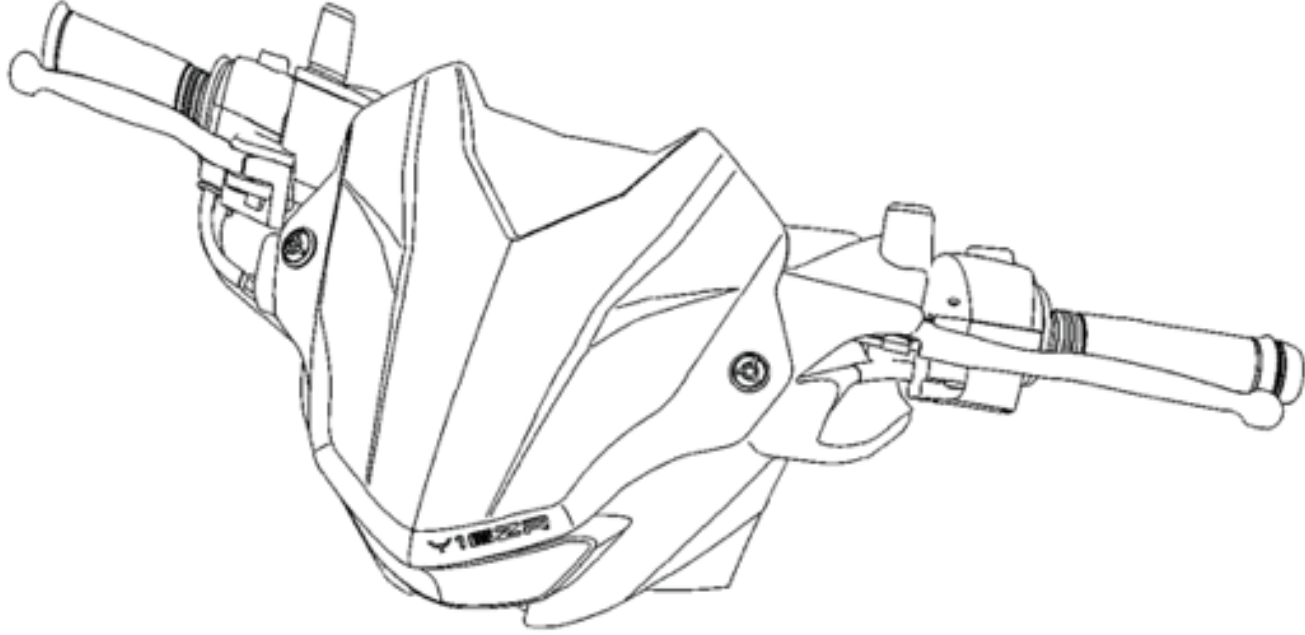


01

Note: Please remove existing visor before proceeding to installation process.

Parts:

- ① Visor (BAX-F61AA-00-ACC)
- ② Cover handle 1 (BAX-F6143-00)
- ③ Bolt, Hex. Socket Button (90111-05817)
- ④ Ring (BAX-F6249-□□-ACC)

- 1) Carefully slide visor hook into cover handle 1 slot.
- △ Make sure both visor hooks are secured to cover handle 1 before proceeding to next step.

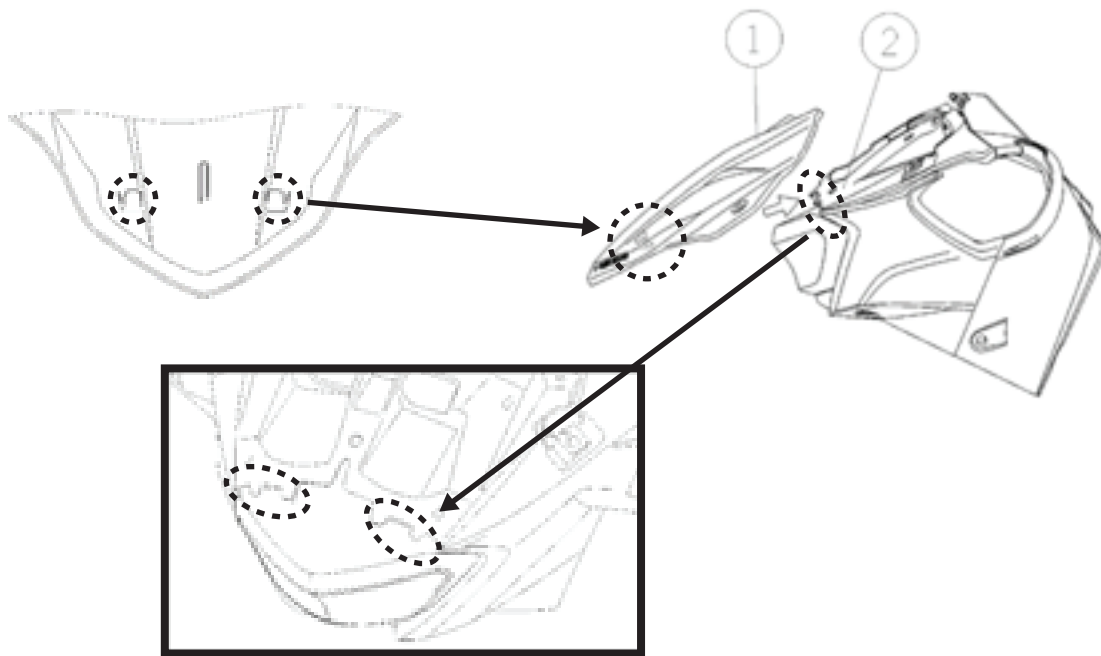


INSTALLATION GUIDE

02




After Assembly

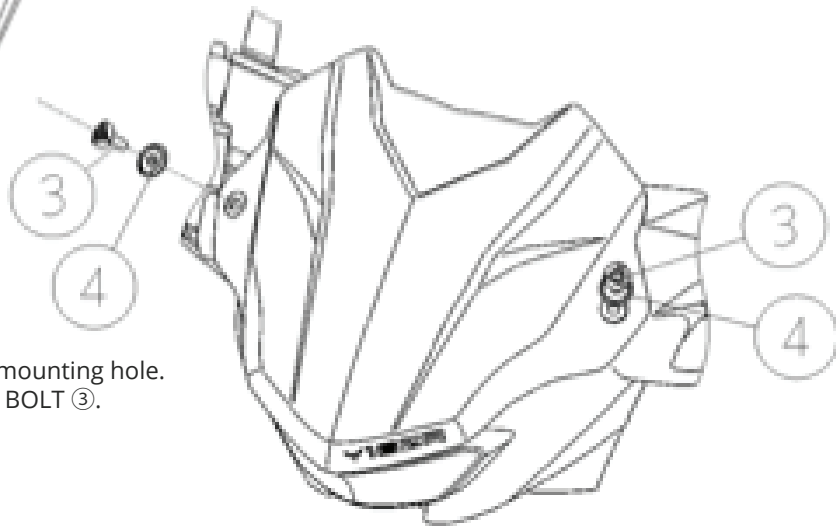

- 2) Insert Bolt ③ and Ring ④ into mounting hole.
 - 3) Use size '4' Allen key to tighten BOLT ③.
- [Tightening torque = 1.5~2.0Nm]

DISASSEMBLY GUIDE

- 1) Untighten and remove Bolt ③ and Ring ④ from visor.
- 2) Slide visor ① forward to remove visor from motorcycle.

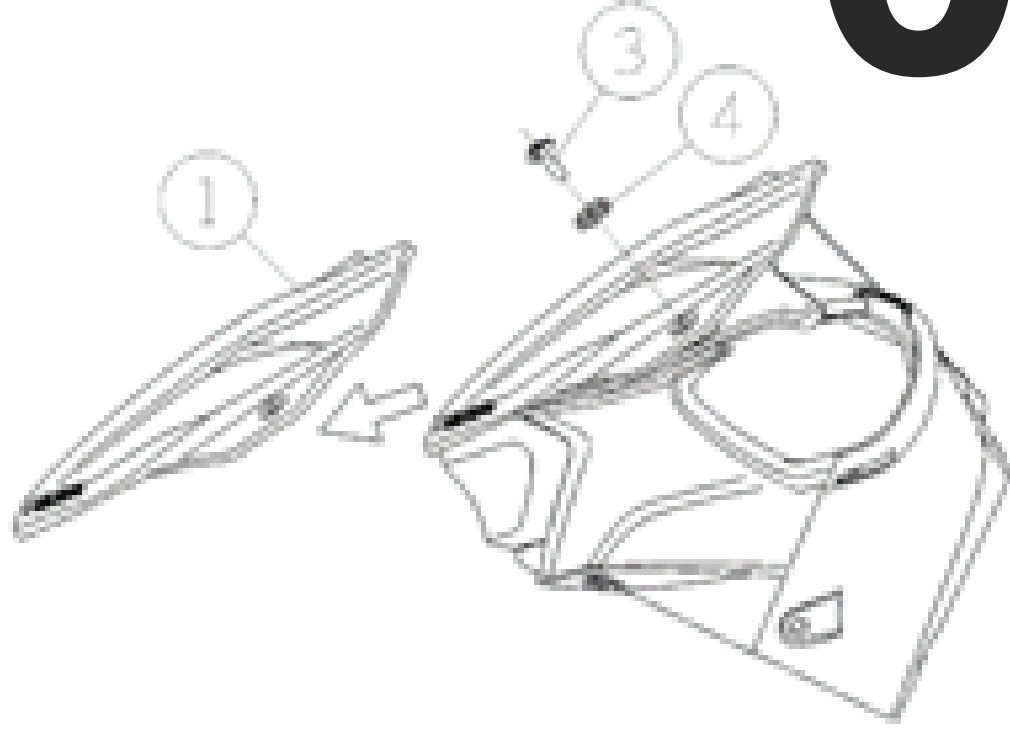


03

PRECAUTION

1 Do not pull visor outwards when disassembly as it will damage the visor hooks.



2 Make sure visor hook is properly slotted into Cover Handle 1 before tightening bolts.

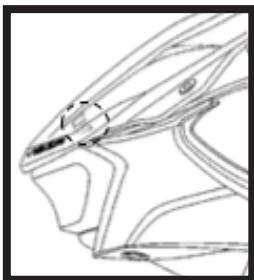

3 Do not over tighten or force the Bolts as they could damage the Visor.

04

Y16ZR
ドクソウ
DOXOU

SPORTS FASHION EDITION

