


TEKHNE

VISOR INSTALLATION MANUAL

EZ 115

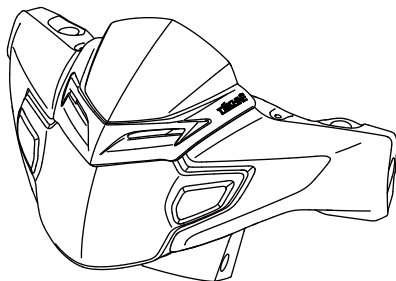


TEKHNE


Tekhne is inspired by the Greek word 'technê' (pronunciation: /'te.xni/), meaning art, craft, technique, or skill.

Products offered by Tekhne are specially crafted to meet the needs and expectations of consumer's machines (motorcycles) – performance and reliable parts with cutting-edge technology.

The colours are specifically chosen to further emphasize what the brand stands for:




Red symbolizes energy and passion.



Blue represents intelligence, innovation and reliability.

BOX CONTENTS

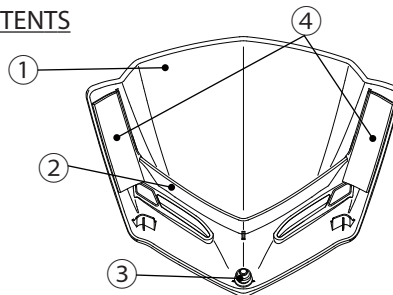

| NO | PART NAME | QTY |
|----|-----------|-----|
| ① | VISOR | 1 |
| ② | DAMPER | 1 |
| ③ | CAP | 1 |
| ④ | TAPE, 1 | 2 |


ASSEMBLY INSTRUCTIONS



Precaution

1. Carefully follow the instructions to prevent incorrect assembly.
2. Avoid removing the visor after affixing onto bike
3. Avoid washing the Visor for 24 hours after affixing.


- ② Adjust headlight to the lowest position

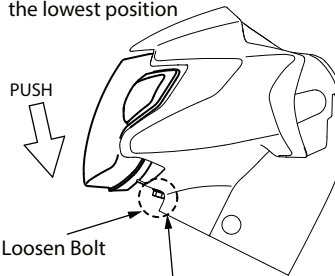

- ① Loosen Bolt

- ③ Temporary tightened Bolt


- ④ Peel tape liner

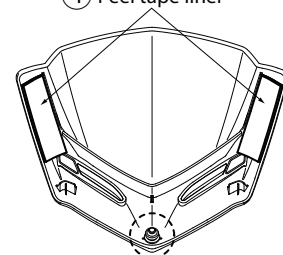

Do not remove CAP


⚠ IMPORTANT!

Make sure the guiding rib is aligned and centered to the Cover Handle before proceed to step ⑤.

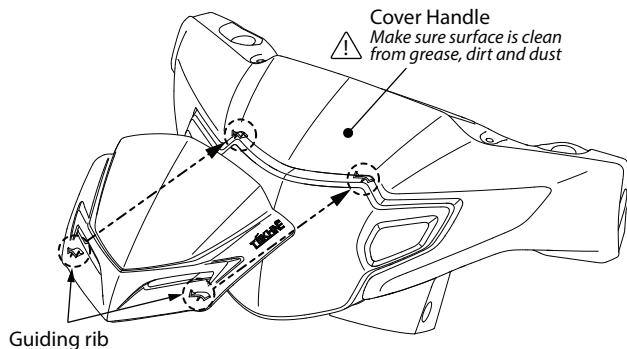


- ⑤ Position the Visor onto Cover Handle at an angle. Make sure guiding rib is in contact with the Cover Handle.

⚠ Hold Visor upwards to prevent Tape from sticking onto Cover Handle at this moment.

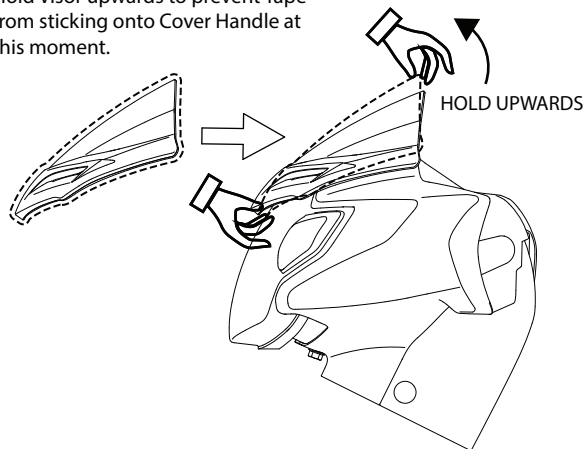

- ⑥ Push the Visor onto Cover Handle

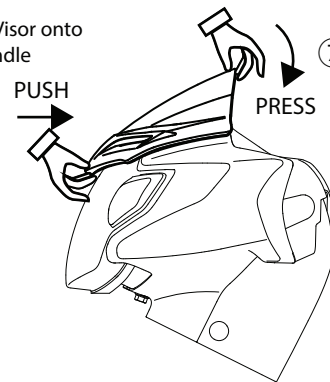

- ⑦ While pushing, press the Visor down to stick onto Cover Handle

- ⑧ Adjust the headlight until the Bolt is center to the marking. Tightened the Bolt.

